 
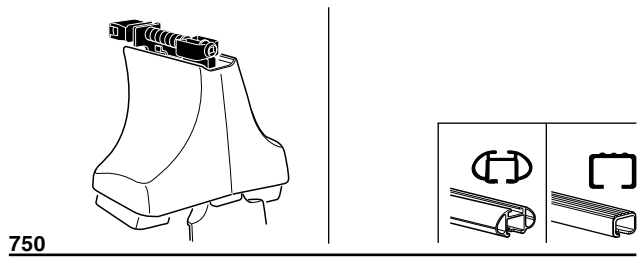 
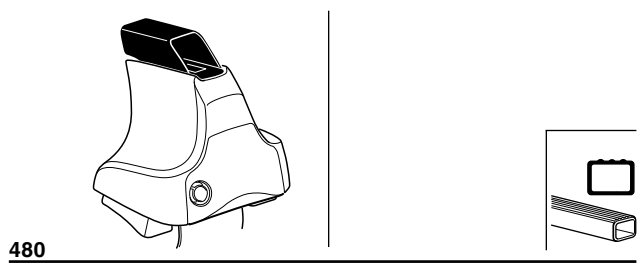


Kit 1191

LAND ROVER Freelander, 3-dr SUV, 98-03
LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05

*North America

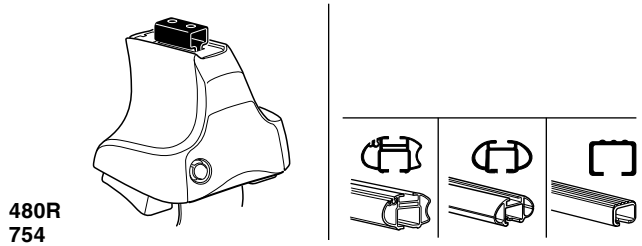

xx kg / xx lbs + 7 kg / 15,4 lbs = **Max. 60kg**

 3 kg / 6,6 lbs = **Max. 132 lbs**

80 km/h / 50 Mph, 130 km/h / 80 Mph, 40 km/h / 25 Mph

km/h / Mph

THULE + **Kit XXXX**

480R/754

 x1, x4, x4

480

 x1, x4, x4

750

 x1, x4, x4

x2	x2	x2	x2	x2
x2		x2	x2	
x2		x4	x2	
x4		x4		

 
251 x 4

03 x 4



x 1

Kit







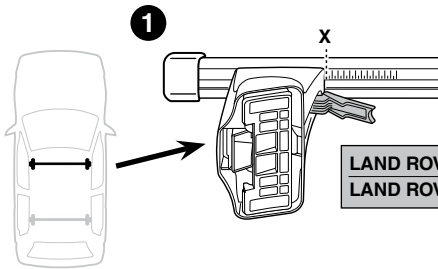




	X	
LAND ROVER Freelander, 3-dr SUV, 98-03	29	
LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05	29	

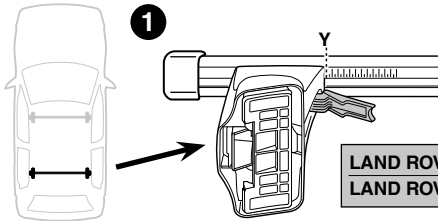  














	Y	
LAND ROVER Freelander, 3-dr SUV, 98-03	27	
LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05	27	

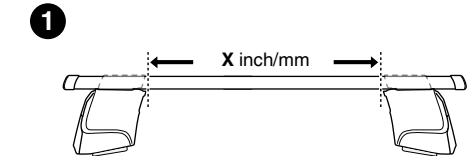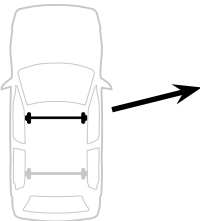    


	X inch	X mm
LAND ROVER Freelander, 3-dr SUV, 98-03	37"	941 mm
LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05	37"	941 mm

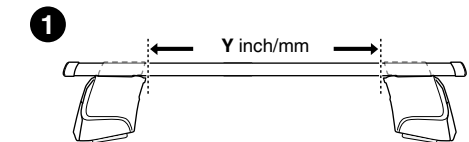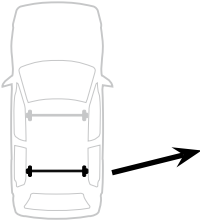   


	Y inch	Y mm
LAND ROVER Freelander, 3-dr SUV, 98-03	36 1/4"	921 mm
LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05	36 1/4"	921 mm

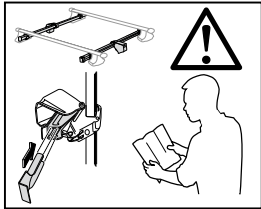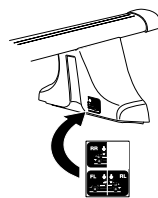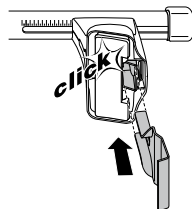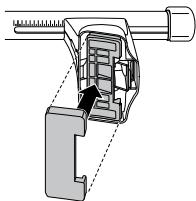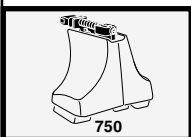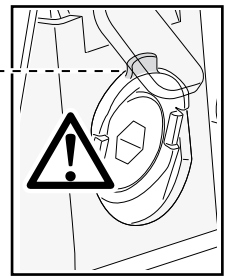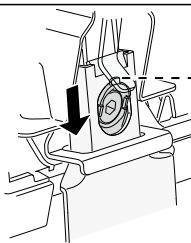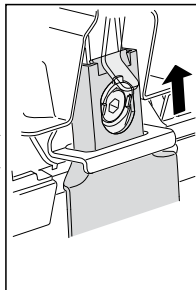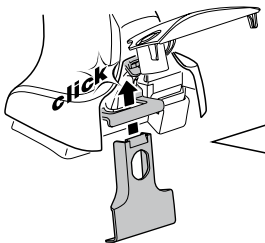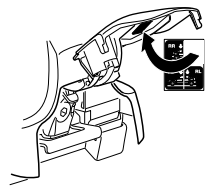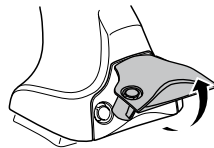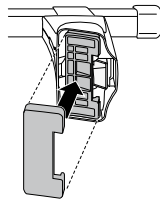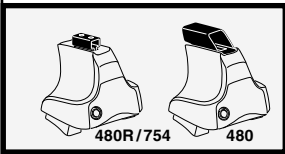             4**LAND ROVER Freelander, 3-dr SUV, 98-03****SRA****LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05**



 
5

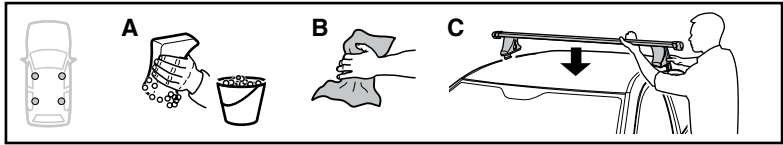

	X mm	Y mm	X inch	Y inch
LAND ROVER Freelander, 3-dr SUV, 98-03	200 mm	700 mm	7 ⁷ / ₈ "	27 ¹ / ₂ "
LAND ROVER Freelander, 5-dr SUV, 98-03 / *02-05	260 mm	640 mm	10 ¹ / ₄ "	25 ¹ / ₄ "

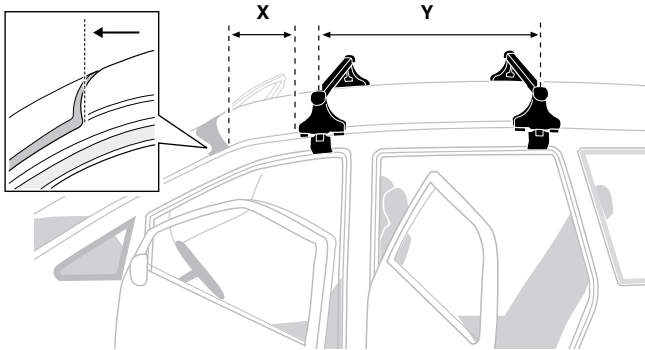 

LAND ROVER Freelander, 3-dr SUV, 98-03

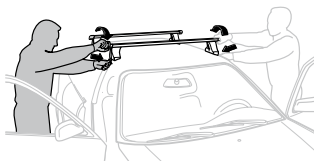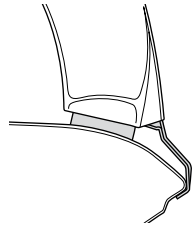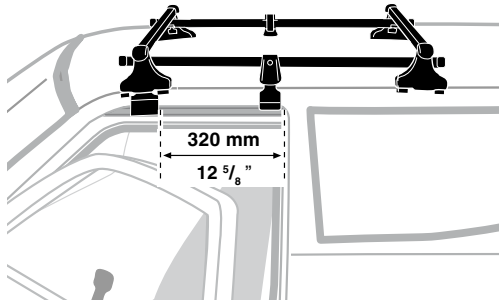   

- GB/US** Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

- CZ** Pokrétla bagazníka dokręcaj dokręcaj naprzemiennie.
SK Dotahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ

 
6



480R/754



480

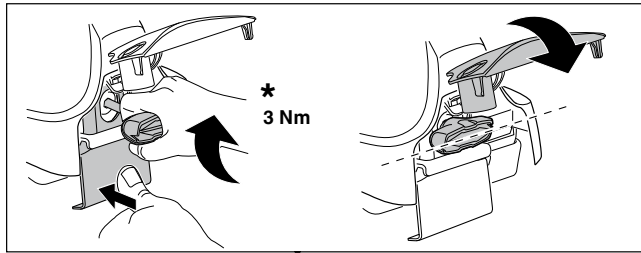



*
3 Nm




*











 
 
*
≈ 3 Nm

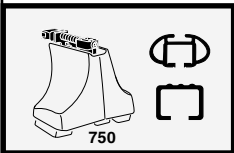
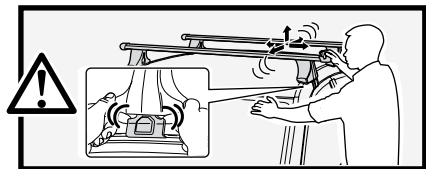


750

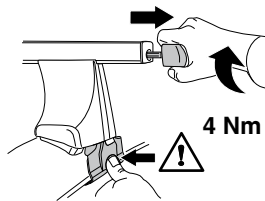 

4 Nm

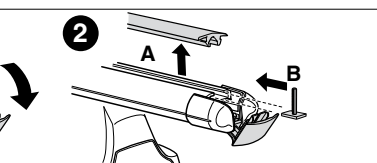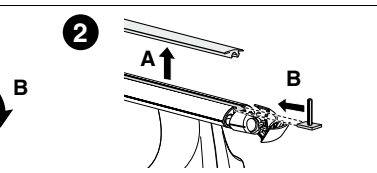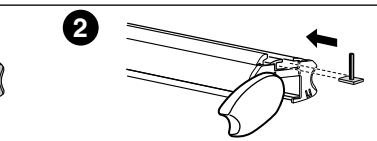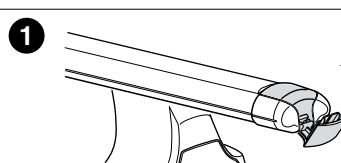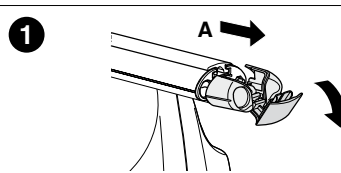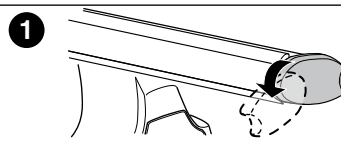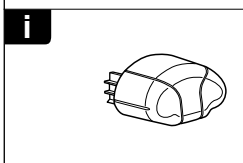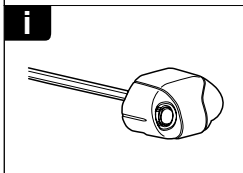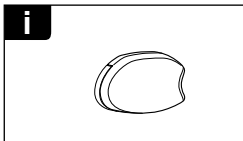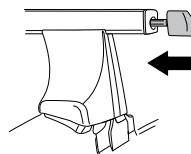        

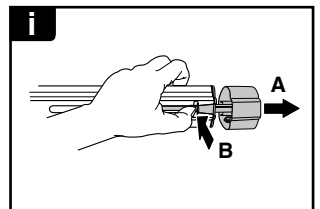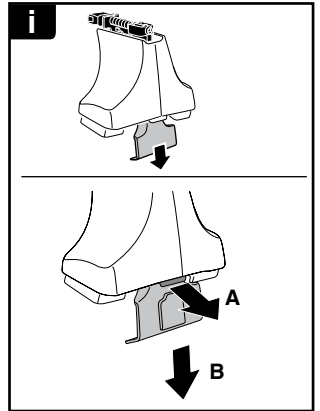

THULE
SWEDEN
**ONE
KEY
SYSTEM**



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA 452 (x12)



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com