
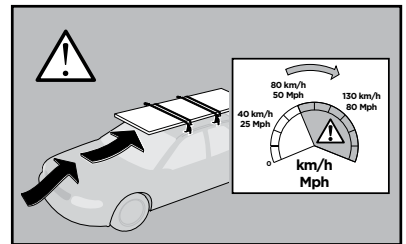
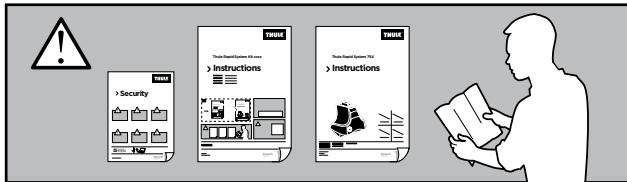
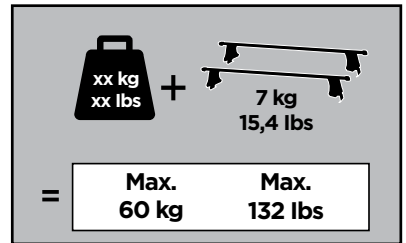


Thule Rapid System Kit 1038

> Instructions

AUDI A3, 3-dr Hatchback, 96-99, 00-02

AUDI A3, 5-dr Hatchback, 99-03

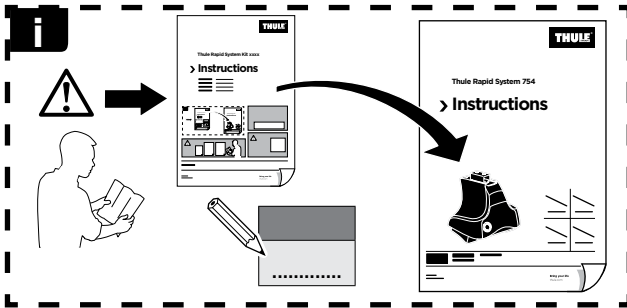

ISO 11154-E

141038


C.20121003
519-1038-01

Bring your life

thule.com



03 x2




90 x2




x1

25 x2






91 x2



x1

1

	X (scale)	X (mm)	X (inch)
AUDI A3 , 3-dr Hatchback, 96-99, 00-02	28,5	936	36 ⁷ / ₈
AUDI A3 , 5-dr Hatchback, 99-03	28,5	936	36 ⁷ / ₈

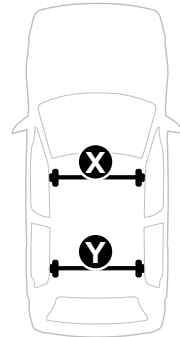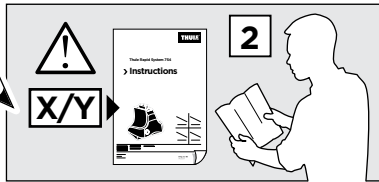
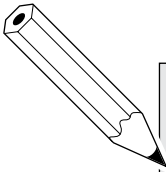


	Y (scale)	Y (mm)	Y (inch)
AUDI A3 , 3-dr Hatchback, 96-99, 00-02	27	921	36 ¹ / ₄
AUDI A3 , 5-dr Hatchback, 99-03	27	921	36 ¹ / ₄



2

AUDI A3, 3-dr Hatchback, 96-99, 00-02


AUDI A3, 5-dr Hatchback, 99-03

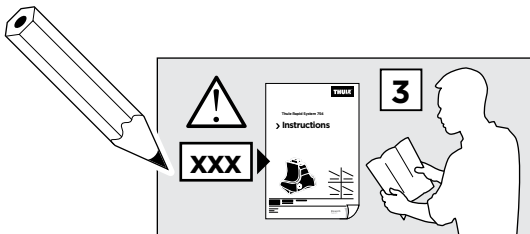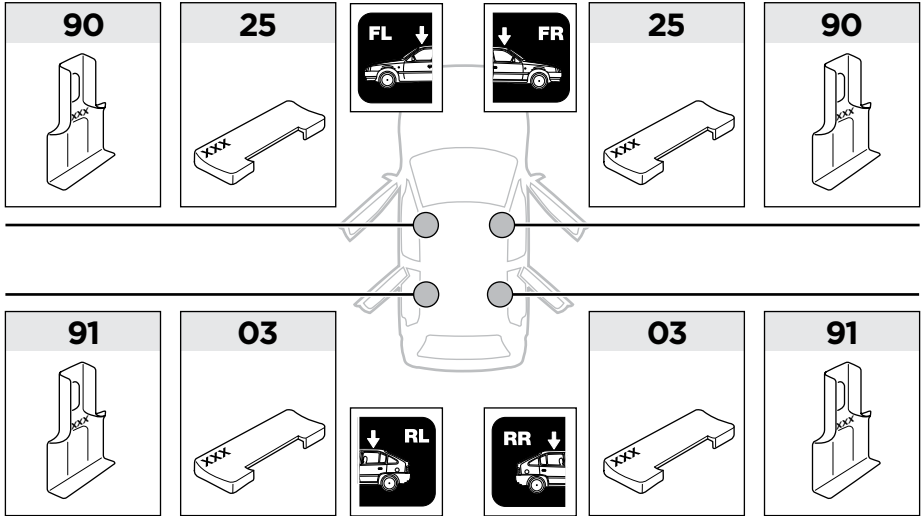



3

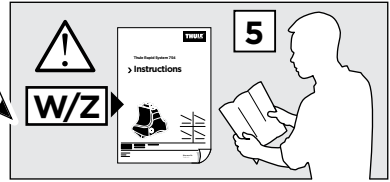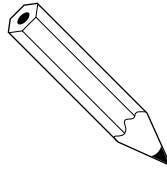

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A3 , 3-dr Hatchback, 96-99, 00-02	280	700	11	27 1/2
AUDI A3 , 5-dr Hatchback, 99-03	280	700	11	27 1/2

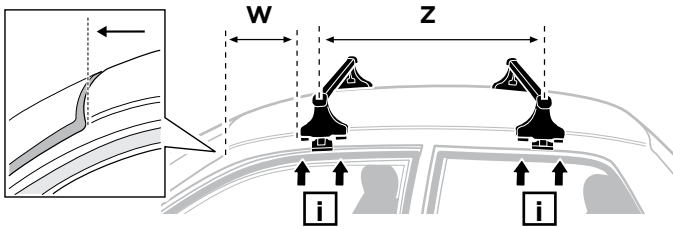

AUDI A3, 3-dr Hatchback, 96-99, 00-02

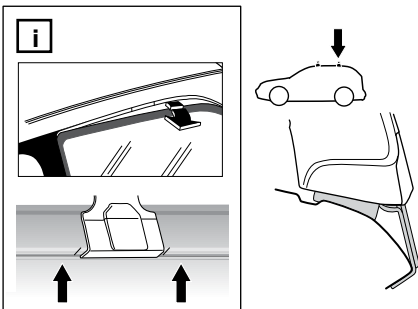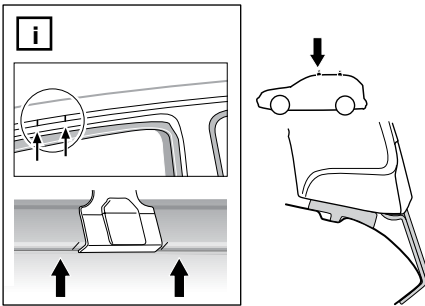

AUDI A3, 5-dr Hatchback, 99-03

