
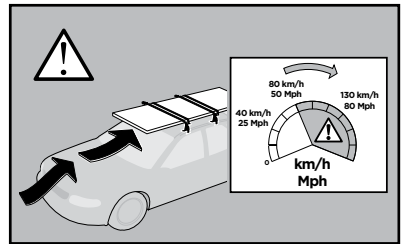
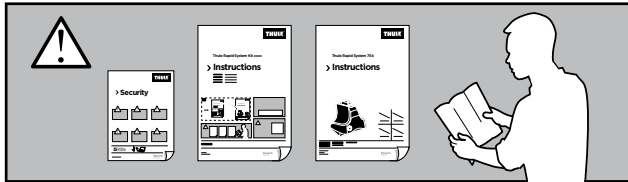
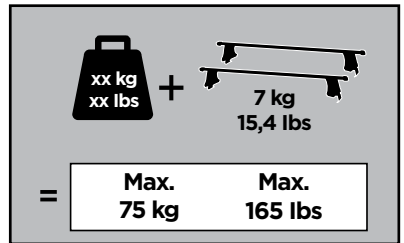


Thule Rapid System Kit 1102

> Instructions

HONDA CR-V, 5-dr SUV, 97-01

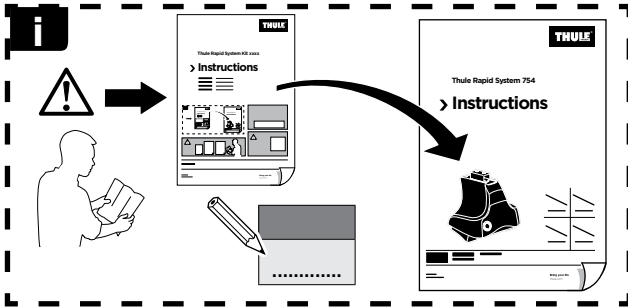

ISO 11154-E


141102

C.20121022
519-1102-01

Bring your life
thule.com




07 x4



231 x4





x1



x1

1



	X (scale)	X (mm)	X (inch)
HONDA CR-V, 5-dr SUV, 97-01	34,5	996	39 1/4

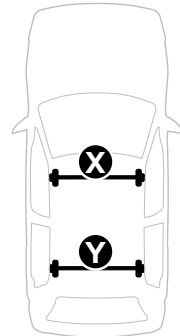
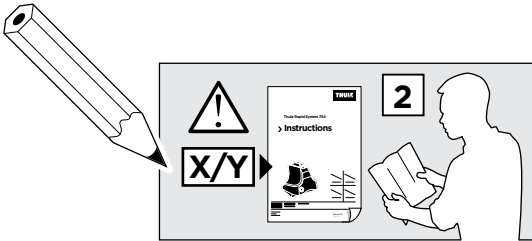


	Y (scale)	Y (mm)	Y (inch)
HONDA CR-V, 5-dr SUV, 97-01	32,5	976	38 3/8

2

HONDA CR-V, 5-dr SUV, 97-01

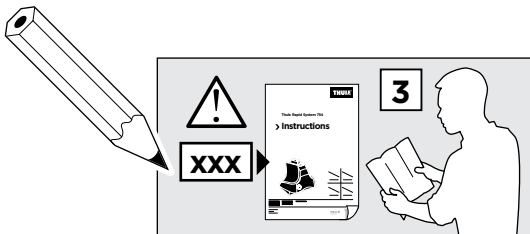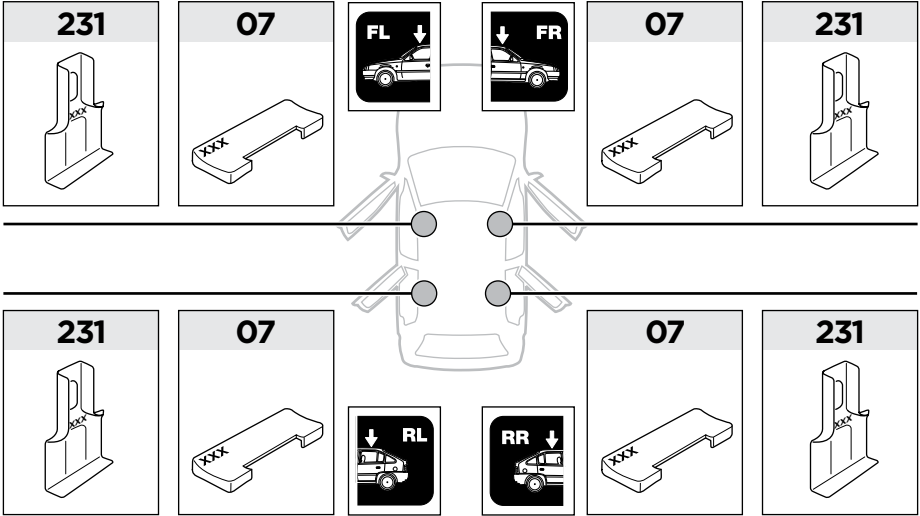

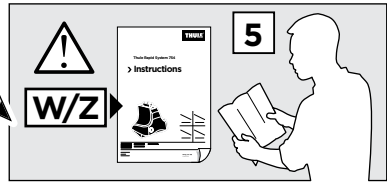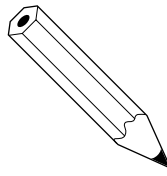3

	W (mm)	Z (mm)	W (inch)	Z (inch)
HONDA CR-V, 5-dr SUV, 97-01	350	700	13 ³/₄	27 ¹/₂

